


Template for:

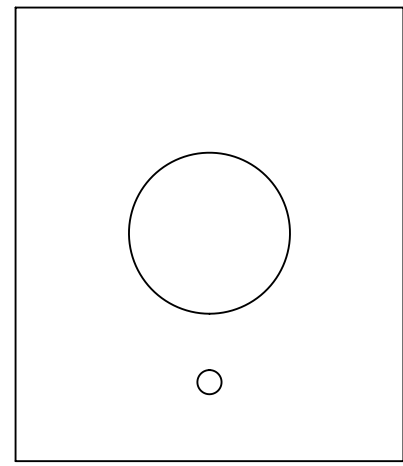

## Worktop ALLEGHENY TC0103

Caution:  
All cut outs need to be smooth inside.  
The edges on top and backside need at least a 2 mm bevel.

Worktop front edge

