


Template for:

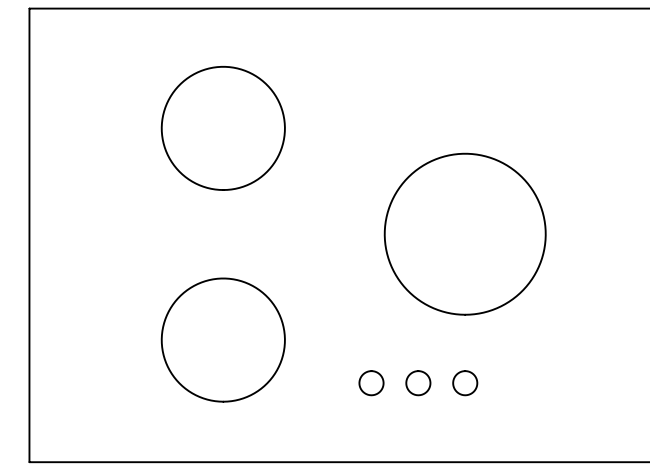

Worktop CONNECTICUT TC0303

Caution:
All cut outs need to be smooth inside.
The edges on top and backside need at least a 2 mm bevel.

Worktop front edge

