


Template for:

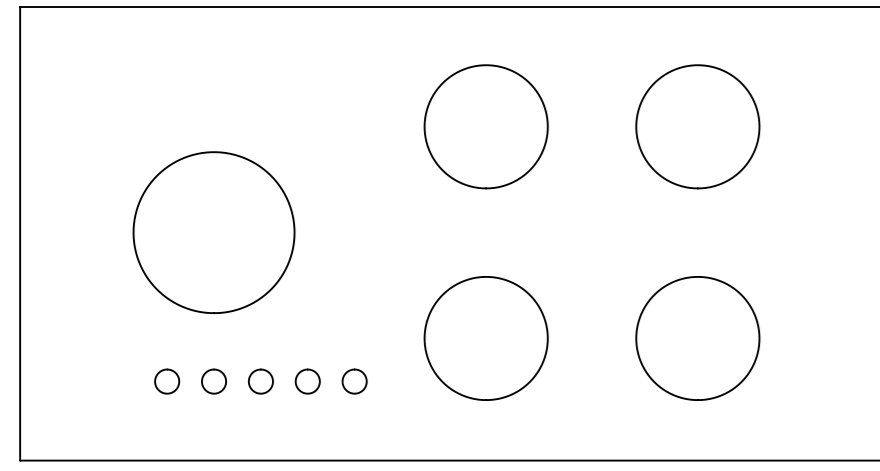

Worktop EASTMAIN TC0501

Caution:
All cut outs need to be smooth inside.
The edges on top and backside need at least a 2 mm bevel.

Worktop front edge

