


Template for:

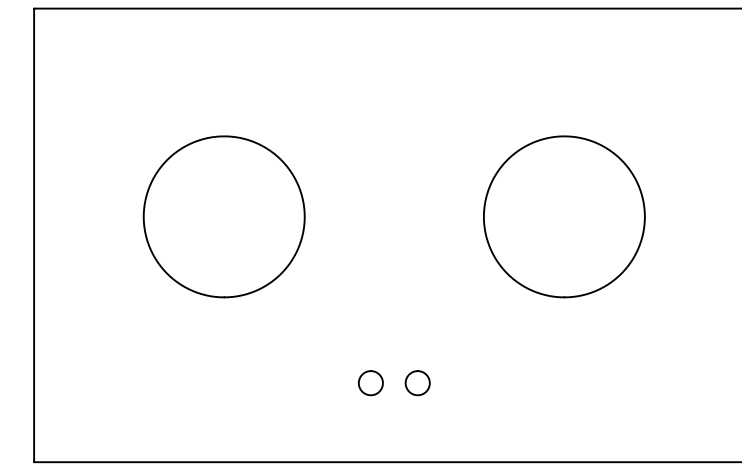

Worktop BARRINGTON TC0203

Caution:  
All cut outs need to be smooth inside.  
The edges on top and backside need at least a 2 mm bevel.

